



 
Professional Grooming Products Supplier



## Rechargeable Pet Trimmer

MC-250

New  
Generation

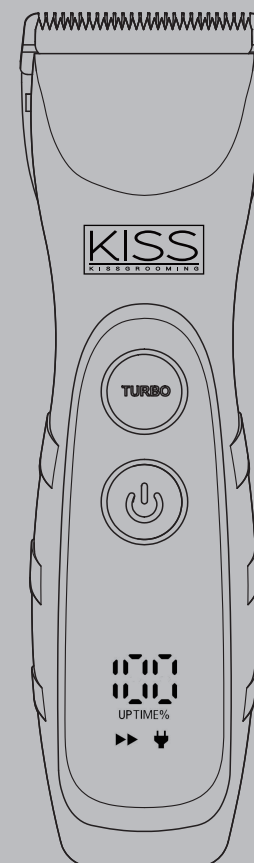

User Manual

Distributor Contacts



**AEOLUS**  
Power by AEOLUS

Producer: Shanghai TOEX International Trading Co., Ltd.  
Address: Room 403, Building 3, No. 288, Qianfan Road,  
Songjiang District, Shanghai, China.

Manufacturer: Shanghai Xunyu Industrial Co., Ltd.  
Address: Lane 29, No.1509 East Qianming Road,  
Fengjing Town, Jinshan District, Shanghai.

Pro for Pros

Thank you for purchasing our product. Please read this manual carefully before use and keep it for future reference. The images are for reference only, and the actual product may vary.

# Product Introduction

Power Supply Mode: Rechargeable/Plug-in

Charging Voltage: DC5V1A

Dimensions: 155x45x40mm

Weight: 156g


Charging Time: 200 minutes

Working Time: High-speed mode-150 minutes/Normal mode-200 minutes

Battery Specifications: Lithium battery 18650, 1500mAh

Compliance Standards: GB47061, GB47069

Accessories: Cleaning brush, TYPE-C charging cable, Attachment combs (1.5mm, 3.0mm, 4.5mm, 6.0mm)

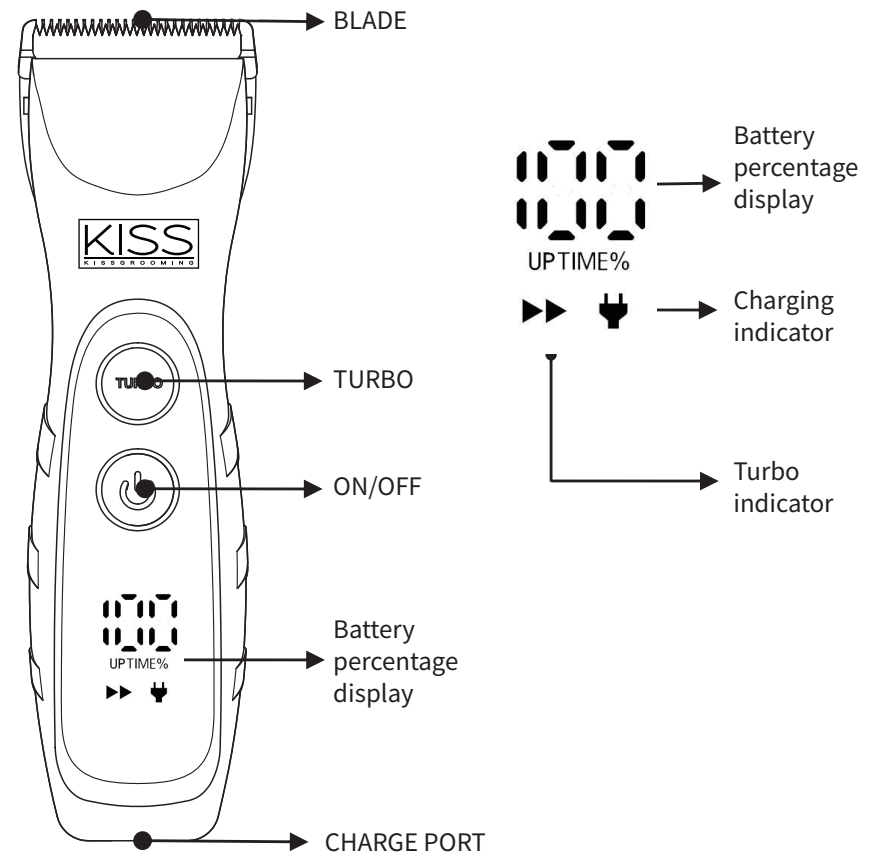

# Technical Specifications

## Safety Blade

This product is equipped with a dedicated blade that has undergone special R-round processing on the skin contact surface to prevent scratches or damage to the skin. The blade is finely crafted and made from high-quality materials, ensuring durability and long-lasting performance.

## Low Noise, Low Vibration

Designed with a low-noise motor, this product provides a quiet and comfortable user experience. You can focus more on the pruning process without being disturbed by loud noises.

## Detachable Blade

This product is equipped with a dedicated blade that has undergone special R-round processing on the skin contact surface to prevent scratches or damage to the skin. The blade is finely crafted and made from high-quality materials, ensuring durability and long-lasting performance.

## Low Noise, Low Vibration

This product features a detachable blade design, allowing users to easily clean up stray hairs and perform maintenance tasks. This design ensures that the product remains hygienic and clean throughout its use.

## Attachment Combs

Four attachment combs are included with this product, enabling easy trimming of various lengths. This design caters to different user needs and ensures optimal results.



# Safety Instructions

1. Do not plug in or unplug the power adapter with wet hands to avoid electric shock.
2. Do not pull or twist the power adapter cable forcefully, as this may cause electric leakage, short circuit, or fire. If the cable is damaged, replace it immediately to prevent accidents.

3. This product and its accessories are not toys. Keep all accessories out of reach of children to avoid danger.
4. If any abnormality is found with the power adapter cable, stop using it immediately. Continuing to use it may result in electric leakage, short circuit, or fire.
5. This product is intended only for pet hair trimming. Do not use it for other purposes. Do not use it to trim hair that is wet or undergoing coloring treatment, as this may cause pulling or injury.
6. Use only the original power adapter cable provided. Do not use this cable with other models to avoid accidents.

# Operation Instructions

## Power On/Off

1. Start the Clipper
  - ① Press the Power button to start the clipper.
  - ② The blades will oscillate, and the battery percentage will be shown on the display.
2. Switch to High-Speed Mode
  - ① Press the TURBO button to switch to high-speed mode.
  - ② The blades will accelerate, and  will appear on the display.
3. Switch to Normal Speed
  - ① Press the TURBO button again to return to normal speed.
  - ② The blade speed will decrease, and  will appear from the display.
4. Turn Off the Clipper

Press the Power button again to turn off the clipper.
5. Low Battery Warning
  - ① When the battery level drops below 10%, the clipper will automatically prompt for charging.
  - ② The charging indicator light will turn on to remind you to recharge.

Note: The numbers shown on the display represent the battery percentage, not the remaining usage time.

## Blade Assembly & Disassembly

1. Blade Removal

Turn off the clipper. Place your thumb on the blade teeth and push firmly in the direction of the arrow to remove the blade.

To prevent damage, hold the blade securely during removal to avoid dropping it.
2. Blade Installation

Insert the connector A of the blade into the slot B on the clipper body. Align properly, then press the back of the blade firmly until you hear a “click.”

NOTE: Ceramic blades are fragile and may break if dropped. Handle with care when installing or removing.

A damaged ceramic blade may cause hair pulling or prevent the blade from moving. Replace the blade promptly if damaged.

Regularly disinfect the blade to maintain hygiene during grooming.




ATTENTION:

Do not remove the spring on the blade. Doing so may prevent the blade from resetting and render it unusable.

After each use, remove the blade and clean both the surface and the hair debris between the teeth to maintain sharpness.

If the blade is rinsed with water, wipe it dry immediately to prevent the spring from rusting.

After cleaning, apply a few drops of lubricating oil to keep the blade in good condition.

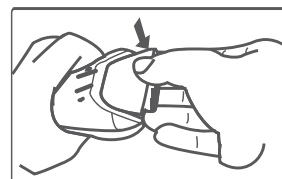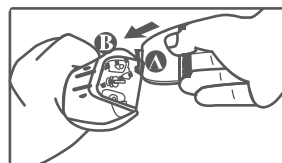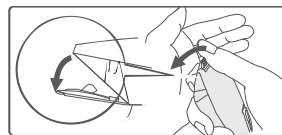


## Plug-in / Charging

Insert the USB charging cable into the power port of the clipper.

NOTE: Before first use, fully charge the product.


When using a non-standard 5V charger, ensure the output current is 1A to charge safely.

This product uses a Type-C charging cable.

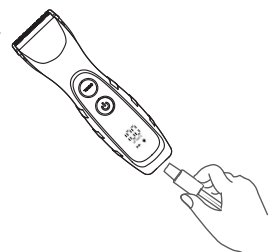


Make sure the clipper is turned off. Insert the USB charger into a power outlet.

(The USB charging cable can also be connected to sockets with USB ports, mobile phone chargers, desktop computers, laptops, or power banks.)

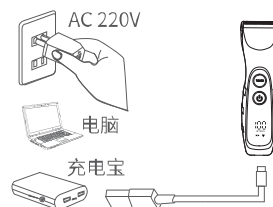

# Maintenance

## Blade Maintenance

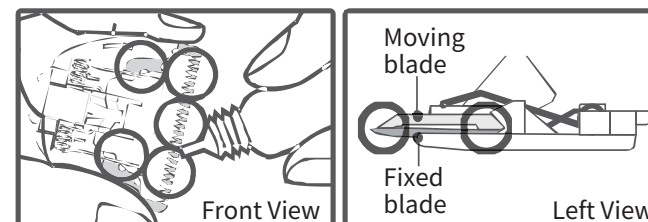


The circled areas indicate the positions where lubricating oil should be applied—at the friction points between the moving and fixed blades.


After applying the oil, move the blade frame back and forth to distribute the oil evenly across the blade.

NOTE: The service life of the blade depends on usage frequency, hair type, and maintenance. Replace worn blades in time to prevent hair pulling. For replacement, please contact our authorized distributors or service centers. Do not use incompatible blades from other manufacturers. During use, the blade may become slightly warm. This is normal and does not affect performance.

## Body Cleaning & Maintenance

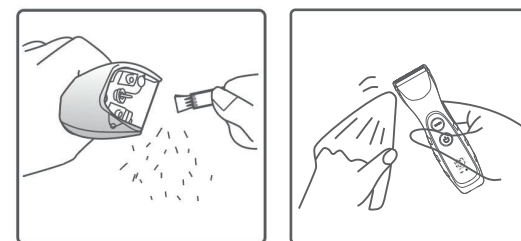

Use the cleaning brush to remove hair debris from the blade slot on the clipper. After cleaning, wipe the clipper with a dry cloth, reinstall the blade, and store properly.

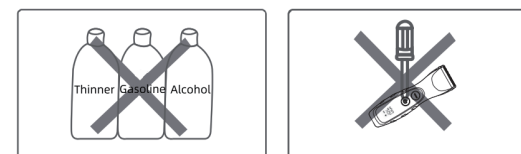

Do not use gasoline, alcohol, thinner, or other corrosive chemical solvents to wipe the clipper. Do not disassemble or repair the product by yourself. For servicing, please contact an authorized service center.

## Troubleshooting

Issues	Possible Causes	Solutions
The clipper trims hair unevenly.	The product does not touch the skin when moved across the hair.	When moving the product on the skin, please make sure that the flat part of the comb teeth is always in full contact with the skin.
	You are using this product on wet hair.	Make sure the hair is clean and dry. Do not use the clipper on overly wet hair.
	Trimming performance decreases when the battery is low.	Charge the battery.
	You are moving the product in only one direction.	Move this product in different directions, because hair does not grow in one direction.
	The attachment comb is not properly installed on the clipper.	Remove the attachment comb and reinstall it, making sure to follow the correct steps.
Pressing the On/Off button, the clipper does not work.	The rechargeable battery is empty.	Charge the battery

This product is only intended for trimming pet hair. Do not use it for other purposes. Do not use it on hair that is being permed, dyed, or is still wet, to avoid pulling and injury. This product uses a rechargeable battery. Before disposal of the product when it can no longer be repaired, the battery must be removed. When removing the battery, the power must be disconnected. The battery should be placed in a recycling station for safe disposal.

## Service Support

Contact us if you cannot solve your problem with this manual.

### Dallas

3249 Story Rd. W, Irving, TX 75038, USA.

Tel: +1 469 930 6359

Web: [www.aeoluspet.com](http://www.aeoluspet.com)

### Shanghai

Room 403, Building 3, No. 288, Qianfan Road, Songjiang District, Shanghai, China.

Tel: +86-21-67632060, 67632364

### Vietnam

19 Nguyen Thong, Hien Nguyen Du Street, Hai Ba Trung, District, Hanoi, Vietnam

Tel: +84 913 238 771

Email: [linh.vp@aeoluspet.com](mailto:linh.vp@aeoluspet.com)

### Europe GmbH

August-Borsig-Straß 9, Bergheim, 50126

Tel: +49 172 8844780

Email: [aeolus-gmbh@aeoluspet.com](mailto:aeolus-gmbh@aeoluspet.com)